

Portable MP3/WMA-CD Player

EXP2550

EXP2551

User manual
Manuel d'utilisation
Manual del usuario
Manual do usuário

PHILIPS




EXP2550

EXP2551



CLASS 1

LASER PRODUCT



Be responsible

Respect copyrights

Specifications are subject to change without notice.


Trademarks are the property of Koninklijke Philips Electronics N.V.

or their respective owners

2005 © Koninklijke Philips Electronics N.V. All rights reserved.

http://www.philips.com

Printed in China

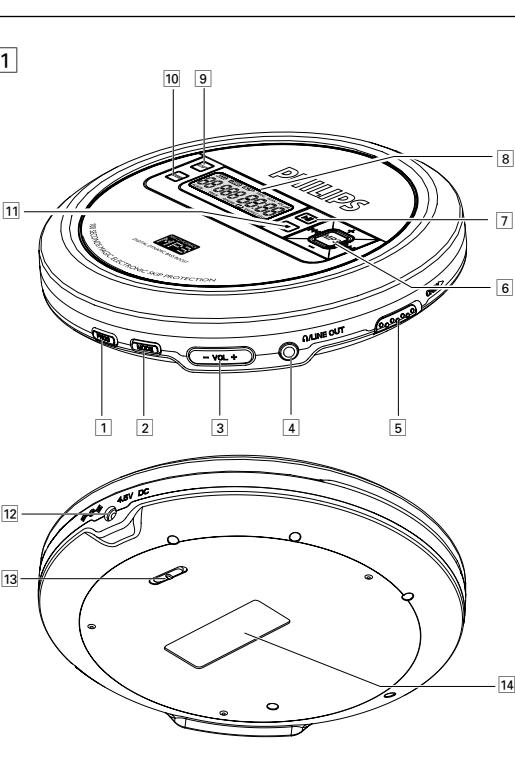

English CONTROLS

Supplied Accessories:

1 x headphones AY3806

CONTROLS (see figure 1)

- 1 PROG programs tracks and reviews the program.
- 2 MODE selects playback options (e.g. SHUFFLE, ▶, ▶).
- 3 - VOL + adjusts the volume.
- 4 □ / LINE OUT: 3.5 mm headphone jack; jack to connect the player to another audio input of an additional appliance.
- 5 OPEN ▶ opens the CD lid.
- 6 ▶ / ▶ skips and searches tracks backward/forward. MP3/WMA only: skips forward/backward albums.
- 7 ▶ II switches the player on, starts playback and pauses playback.
- 8 display
- 9 ESP selects between the battery power/save mode and Electronic Skip Protection (ESP). ESP prevents playback interruption caused by shock.
- 10 DBB switches the bass enhancement on/off. This button also switches acoustic feedback (the beep) on/off when it is pressed for more than 2 seconds.
- 11 □ stops playback/clears programmed tracks/ switches off the set.
- 12 4.5V DC jack for external power supply.
- 13 OFF / RESUME switches the last position of a CD track played.
- 14 HOLD locks all buttons.

Batteries contain chemical substances, so they should be disposed of properly.

This set complies with the radio interference requirements of the European Union.

SELECTING A TRACK AND SEARCHING

Selecting and searching on all discs

Selecting a track

- Briefly press ▶ or ▶ once or several times to skip to the beginning of the current, previous or subsequent track.
- In the pause/stop position, press ▶ II to start playback.

Searching for a passage during playback

- 1 Press ▶ or ▶ to search for a particular passage in a backward or forward direction.
- 2 Release the button when you reach the desired passage.
- 3 Release the button when you reach the desired passage.
- 4 Press ▶ II to start playback of your selected tracks.

Selecting on MP3/WMA CDs

To find a MP3/WMA track, you can first press + / - to select your desired album.

Selecting an album

- Hold down + or press + / - repeatedly until you find the desired album number.
- In the pause/stop position, press ▶ II to start playback.

Helpful Hints:

- When playback of a MP3/WMA CD track in program mode, use of the + / - keys is void.

POWER SUPPLY

Batteries (not included)

Inserting AA (LR6, UM3) batteries

- 1 Open the battery compartment.
- 2 Insert 2 x AA batteries as shown into the battery compartment.
- 3 Close the battery compartment.

Helpful Hints:

- Old and new or different types of batteries should not be combined.

- Remove batteries if they are empty or if the player is not going to be used for a long time.

BATTERY INDICATION

The battery level is shown in the display screen as follows:

- Battery full
- Battery two-thirds full
- Battery one-third full
- Battery dead or empty. When the batteries are dead or empty, the symbol flashes, -P- is displayed, and the beep sounds repeatedly.

COPYRIGHT INFORMATION

- The making of unauthorized copies of copy-protected material, including computer programmes, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such a purpose.
- Windows Media and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.

POWER SUPPLY

Power adapter (supplied for EXP2551 only)

Only use 4.5V/450mA DC, positive pole to the center pin. Any other product may damage the player.

- 1 Make sure local voltage corresponds to the power adapter's voltage.
- 2 Connect the power adapter to the 4.5V DC socket of the player and to the wall socket.

Helpful Hints:

- Always disconnect the adapter when you are not using it.

ENVIRONMENTAL INFORMATION

All redundant packing material has been omitted. We have done our best to make the packaging easily separable into two main materials: cardboard (box) and polyethylene bags, protective foam sheet.

Your set consists of materials which can be recycled if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packing materials, dead batteries and old equipment.

GENERAL INFORMATION

CD player and CD handling

- Do not touch the lens (A) of the CD player.
- Do not expose the unit, batteries or CDs to humidity, rain, sand or excessive heat (caused by heating equipment or direct sunlight).

HEADPHONE

AY3806

- Connect the supplied headphones to the □ / LINE OUT socket of the player.

Helpful Hints:

- □ / LINE OUT can also be used to connect this set with your HiFi system. To adjust the sound and volume, use the controls on the connected audio equipment and the CD player.

IMPORTANT!

Hearing safety: listen at a moderate volume, using headphones at high volume can impair your hearing. We recommend headphone no. AY3806 for this product.

Important: (for models with bypassed headphones) Philips guarantees compliance with the sound pressure level of its CD players as determined by relevant regulatory bodies only with the original model of provided headphones. In case this one becomes defective, we recommend that you contact your retailer to order a model identical to the original, provided by Philips.

ABOUT MP3 / WMA

The music compression technology MP3/WMA (MPEG1 Audio Layer 3) significantly reduce the digital data of an audio CD while maintaining good sound quality.

Getting MP3/WMA files: you can either download legal music files from the internet to your computer hard disk, or create such files by converting audio CD files in your computer through appropriate encoder software. (128kbps bit rate or higher is recommended for MP3/WMA files.)

Important: CDs encased with copyright protection technologies by some record companies may be unplayable by this product.

For DRM protected WMA files, use Windows Media Player 10 (or later) for CD burning/conversion. Visit www.microsoft.com for details about Windows Media Player and WM DRM (Windows Media Digital Rights Management).

PLAYING A CD

To pause playback

- Press ▶ II.
- The elapsed playing time flashes.

To stop playback

- Press ■.
- The display shows the total number of tracks and total playing time of the CD.

To resume playback

- Press ▶ II again to continue playback.

VOLUME AND BASS

Volume adjustment

- Adjust the volume by using - VOL +.

BASS ADJUSTMENT

- Press DBB to switch the bass enhancement on or off.

→ DBB appears if the bass enhancement is activated.

PLAYING A CD

To pause playback

- Press ■.
- The display shows the total number of tracks and total playing time of the CD.

To stop playback

- Press ■ again to switch off the player.

To remove the CD, hold it by its edge and press the hub gently while lifting the CD.

VOLUME AND BASS

Volume adjustment

- Adjust the volume by using - VOL +.

BASS ADJUSTMENT

- Press DBB to switch the bass enhancement on or off.

→ DBB appears if the bass enhancement is activated.

TROUBLESHOOTING

THE CD SKIPS TRACKS

- The CD is damaged or dirty. Replace or clean the CD.

SHUFFLE OR PROGRAM IS ACTIVE

- Shuffle or program is active. Switch off whichever is on.

MUSIC SKIPS OR POPPING SOUNDS WHEN YOU PLAY A MP3/WMA TRACK

- Play the music file in your computer. If the problem remains, encode the audio track again and make a new CD.

NO SOUND OR BAD SOUND QUALITY

- Playback on pause. Press ■.

→ Loose, wrong or dirty connections. Check and clean connections.

Volume might not be appropriately adjusted. Adjust the volume.

Strong magnetic fields. Check the player's position and connections. Also keep away from active mobile phones.

TROUBLESHOOTING

THE INDICATION PROTECT IS DISPLAYED AND THE TRACK CANNOT BE PLAYED

- If PROTECT is activated, then deactivate it.

ELECTROSTATIC DISCHARGE. DISCONNECT POWER OR REMOVE BATTERIES FOR A FEW SECONDS

THE CD PLAYER HAS NO POWER, OR PLAYBACK DOES NOT START

- Check that your batteries are not empty, that they are inserted correctly, that the contact pins are clean.

YOUR ADAPTER CONNECTION MAY BE LOOSE. CONNECT IT SECURELY

IF YOUR LENS HAS STEAMED UP, WAIT A FEW MINUTES UNTIL THE LENS IS CLEAR

CD-RW (CD-R) WAS NOT RECORDED PROPERLY. USE FINALIZE ON YOUR CD-READER

MAKE SURE THE CD IS NOT ENCODED WITH COPYRIGHT PROTECTION TECHNOLOGIES, AS SOME DO NOT CONFORM TO THE COMPACT DISC STANDARD

THE INDICATION HOLD IS ON AND/OR THERE IS NO REACTION TO CONTROLS

- If HOLD is activated, then deactivate it.

ELECTROSTATIC DISCHARGE. DISCONNECT POWER OR REMOVE BATTERIES FOR A FEW SECONDS

MUSIC FILES DO NOT PLAY

- Check that the file names of MP3/WMA files end with .mp3 or .wma

SOME DIRECTORIES MISSING ON MP3/WMA CDs

- Check that the total number of files and albums on your MP3 CDs does not exceed 350.

ONLY ALBUMS WITH MP3/WMA FILES ARE SHOWN

CAUTION

USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN HEREIN MAY RESULT IN UNSAFE OPERATION

FRANÇAIS COMMÉNDES

ACCÉSORIES FOURNIS

1 x écouteurs AY3806

COMMANDES (Voir figures 1)

Piles (non fournies) 1. PROG permet de programmer les pistes, affiche la programmation

2. MODE sélectionne les options de lecture telles que SHUFFLE, ou □, □

3. - VOL + règle le volume.

4. □ / LINE OUT prise pour casque de 3.5 mm; prise permettant de connecter le lecteur à l'entrée audio d'un autre appareil.

5. OPEN ▶ ouvre le couvercle du lecteur.

6. ▶ / ▶ recherche et passe pistes vers l'arrière/vers l'avant pour les CD-MP3/WMA.

7. ▶ II démarre ou interrompt la lecture CD.

8. □ arrête le lecteur, démarre ou interrompt la lecture CD.

9. ESP permet de passer du mode économie d'énergie des piles à la Protection Electronique anti-choc (ESP). ESP assure une lecture continue du CD sans se préoccuper des variations de tension.

10. DBB active/désactive l'amplification des basses. Une pression de plus de 2 secondes sur ce bouton active/désactive le signal sonore (le bip).

11. □ arrête la lecture CD, efface la programmation du CD ou éteint le lecteur.

12. 4.5V DC prise pour alimentation extérieure.

13. OFF / RESUME éteint la fonction HOLD de CD, réinitialise toutes les touches.

14. HOLD identifie le modèle

ALIMENTATION ELECTRIQUE

Piles (non fournies)

Insertion des piles AA (LR6, UM3)

- Ouvrez le compartiment des piles et placez-y soit 2 piles normales ou alcalines.

Conseil astucieux:

